



**UNIVERSAL MOUNT (3 HOLE)
P/N 1007-3**


INSTALLATION INSTRUCTIONS

For additional assistance call 888-514-0083 between 8AM-5PM EST or email: info@pactoolmounts.com

CAUTION

To avoid the risk of personal injury, property damage or product damage, please use the included fasteners for mounting.

- * The bracket must be securely mounted to a stable surface and material.
- * When mounting bracket to PAC TRAC aluminum products **P/N 7000, P/N 7020, P/N 7040, P/N 7050** with the included Trac Lok inserts **P/N 7016**, torque the screws to a maximum 15 in-lbs.
- * PAC recommends regular and frequent inspections to be certain of proper operation and installation.

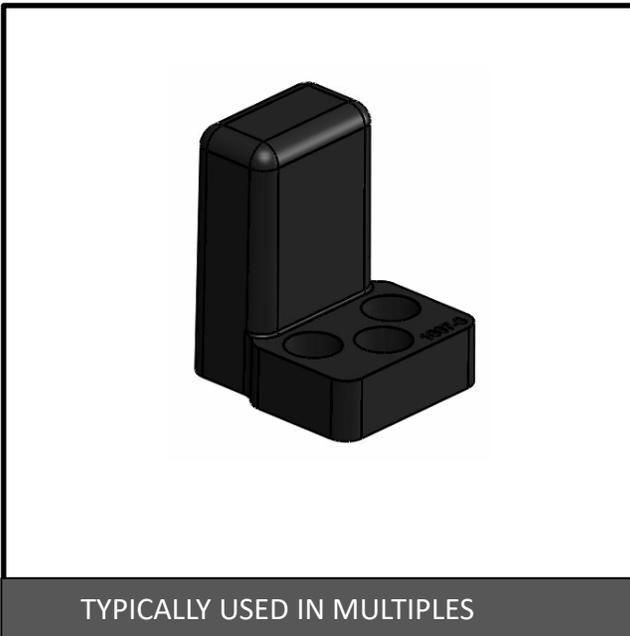

| MTG. HARDWARE | | | QTY |
|---|----------|----------------------------------|-----|
|  | P/N 2046 | #10-24 x 1" SS Pan Head Screw | 2 |
|  | P/N 2054 | #10 S.S. Flat Washer | 2 |
|  | P/N 7016 | Trac Lok Insert | 2 |

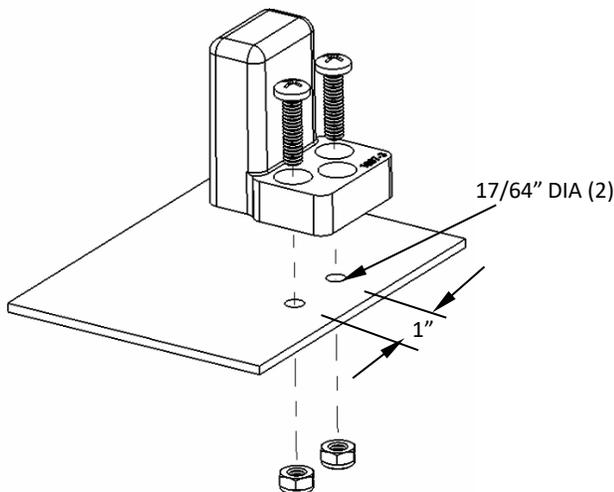


FIGURE 2
(Optional Thru Mounting Method)
Fasteners not included

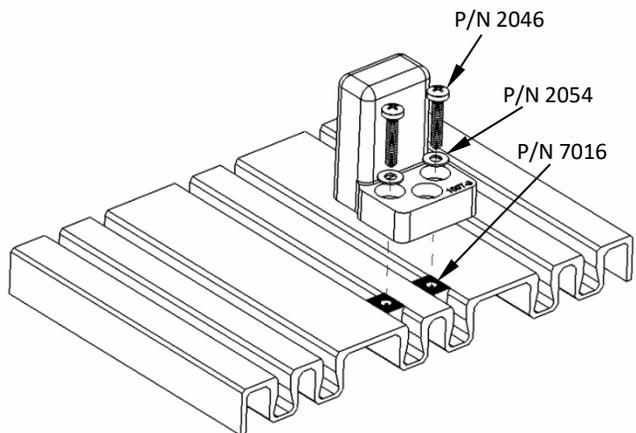


FIGURE 1
(PAC TRAC Mounting)