TOOLOK HD - P/N 1003 HD


INSTALLATION INSTRUCTIONS

For additional assistance call 888-514-0083 between 8AM-5PM EST or email: info@pactoolmounts.com

CAUTION


To avoid the risk of personal injury, property damage or product damage, please use the included fasteners for mounting.

- * The bracket must be securely mounted to a stable surface and material.
- * When mounting bracket to PAC aluminum extrusion products P/N 7000, P/N 7020, P/N 7040, P/N 7050 with the included Trac Lok inserts P/N 7016, torque the screws to a maximum 15 in-lbs.

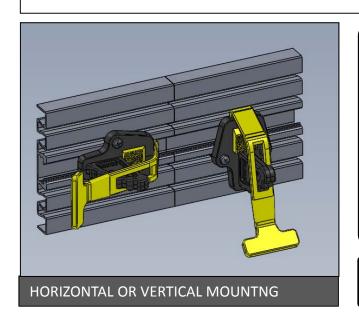

MTG. HARDWARE	QTY
P/N 2046 #10-24 x 1	
P/N 7016 Trac Lok I	nsert 2
P/N 3017 %-20 x 1 S.S. Pan	Head Screw 2
P/N 2069LN	ocking Nut 2

Additional fasteners for mounting to Uni-Strut style channels are also available and sold separately.

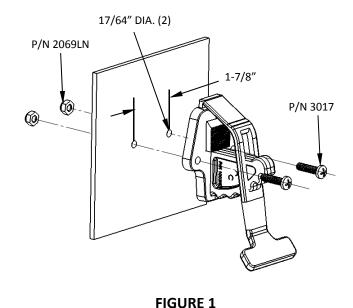

(Thru Mounting Method)

