




1-1/2" ADAPTER LOK P/N 1042-1 INSTALLATION INSTRUCTIONS

For additional assistance call 888-514-0083 between 8AM-4PM EST or email: info@pactoolmounts.com


CAUTION

To avoid the risk of personal injury, property damage or product damage, please use the included fasteners for mounting.

- * The bracket must be securely mounted to a stable surface and material.
- * When mounting bracket to PAC TRAC aluminum products **P/N 7000, P/N 7020, P/N 7040, P/N 7050** with the included Trac Lok inserts **P/N 7016**, torque the screws to a maximum 15 in-lbs.
- * PAC recommends regular and frequent inspections to be certain of proper operation and installation.

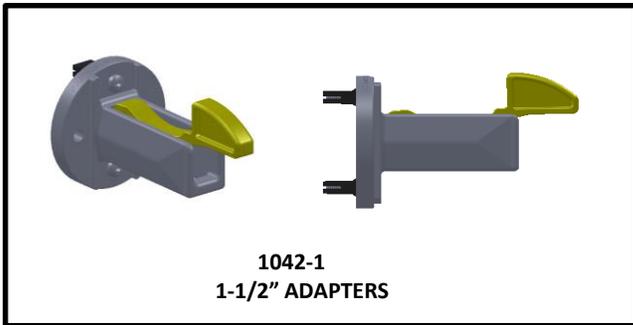

MTG. HARDWARE			QTY
	P/N 2046	#10-24 x 1 S.S. Pan Head Screw	2
	P/N 7016	Trac Lok Insert	2

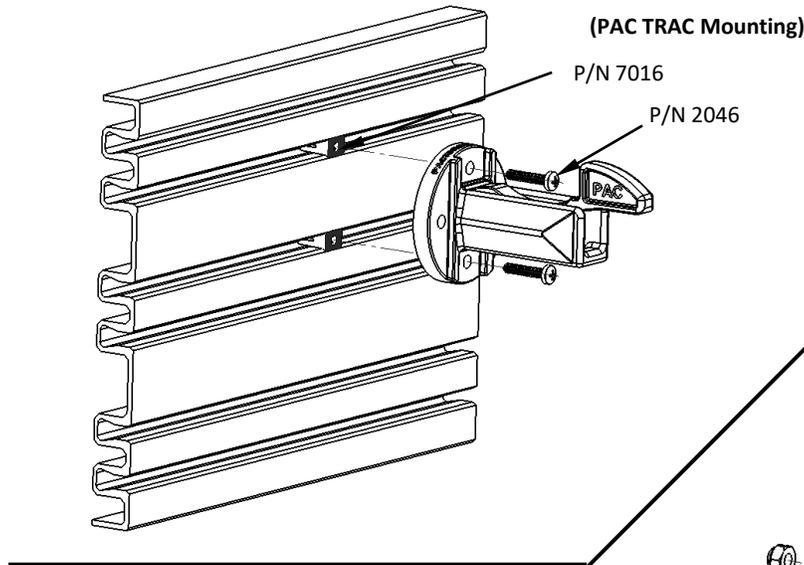

(Optional Mounting Method)

1. Drill up to 17/64" mounting holes as shown
2. Attach with appropriate hardware.
 - ✓ Adapter Loks use #10 or 1/4" Screws
 - ✓ Optional mounting hardware not included
 - ✓ Mount to flat and stable substrates

