



IRONSLOK - P/N K5003

INSTALLATION INSTRUCTIONS

For additional assistance call 716-683-7413 between 8AM-5PM EST or email: info@pactoolmounts.com

CAUTION

To avoid the risk of personal injury, property damage or product damage, please use the included fasteners for mounting.


- * The bracket must be securely mounted to a stable surface and material.
- * This product is designed to secure an 8lb flathead axe and a 30" Halligan style tool. Misuse of this product may result damage or injury and void warranty.
- * Verify that all fasteners have been tightened securely before putting into service.

STD. MTG HARDWARE	QTY
PAC Fastener Packet P/N 2035	2
 P/N 2038 1/4-20 x 1 S.S. Hex Head Screw	4
 P/N 2069LN 1/4-20 S.S. Hex Nut	4
To reverse strap direction or make adjustments:  P/N 2030 3/16 Hex Wrench	1

PAC TRAC MTG HARDWARE	QTY
PAC Fastener Packet P/N 7029	2
 P/N 2049 #10-24 x 3/4 S.S. Phillips Pan head Screw	4
 P/N 7016 TracLok Insert	4


STEP 1 – Locate and drill mounting holes through Uni-Strut channels

Position assembled Ironslok bracket in desired location and determine hole locations. Drill 4 holes through the center of the aluminum channels and the mounting surface.

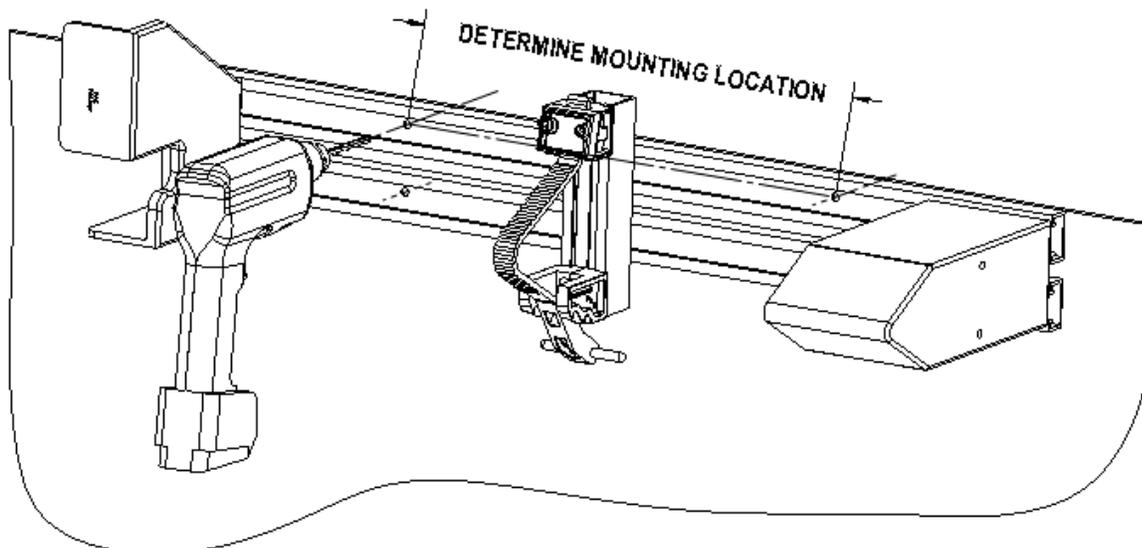

STEP 2 – Attach bracket to mounting surface. (STD. - BOLT THROUGH)

Attach bracket to mounting surface with included hardware (**P/N 2038** hex head screw and **P/N 2069LN** nut) and tighten securely.

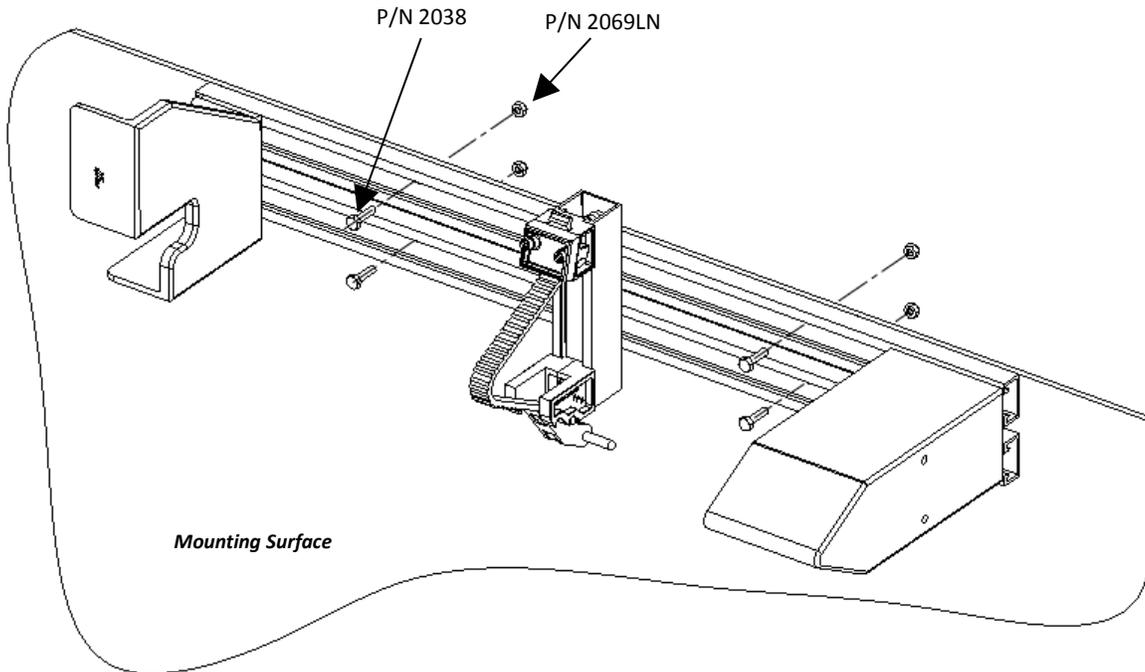

STEP 2 – Attach bracket to mounting surface (PAC TRAC)

Attach bracket to mounting surface with included hardware (**P/N 2049** screw and **P/N 7016** TracLok insert) and tighten to recommended torque specifications.

